


## iLevel Password Reset Procedure:

### **Remove Lid:**

Remove the (4) lid screws with a T-7 torx driver.

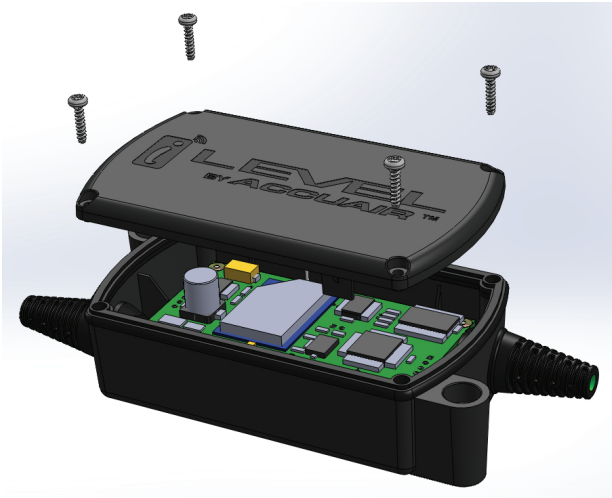

### **Reset Device:**

Start with the iLevel receiver unplugged from both connectors. Use a bent paper clip to short jumper P3 while you re-connect the iLevel back to the ECU connector (power-up). Remove the paper clip after 5 seconds and your defaults will be reset and the iLevel will have NO password like when it was shipped.

